

WILL IT FIT BELOW MY PET FLAP?

IMPORTANT CONSIDERATIONS BEFORE PURCHASE AND INSTALLATION

Cat Flap Step has been designed to cope with a wide range of cat flap products and their various installation positions. It is however essential to make sure the step will fit below your pet flap before purchase and installation.

The diagram below shows the space required for the step to be successfully installed below your pet flap.

Please check the step will fit roughly half way between the floor and the bottom lip of the cat flap. Also, ensure there is enough mounting area available for the brackets.



All surfaces **MUST** be clean and smooth otherwise the adhesive tape will not work properly.

VERY IMPORTANT

Please check the step will fit roughly half way between the floor and the bottom lip of the cat flap before removing any adhesive tape backing or drilling any holes.

As with any product, Cat Flap Step has a few sharp edges resulting from the manufacturing processes used. Please take care when handling or installing the step.

Front view showing optimum positioning of Cat Flap Step.

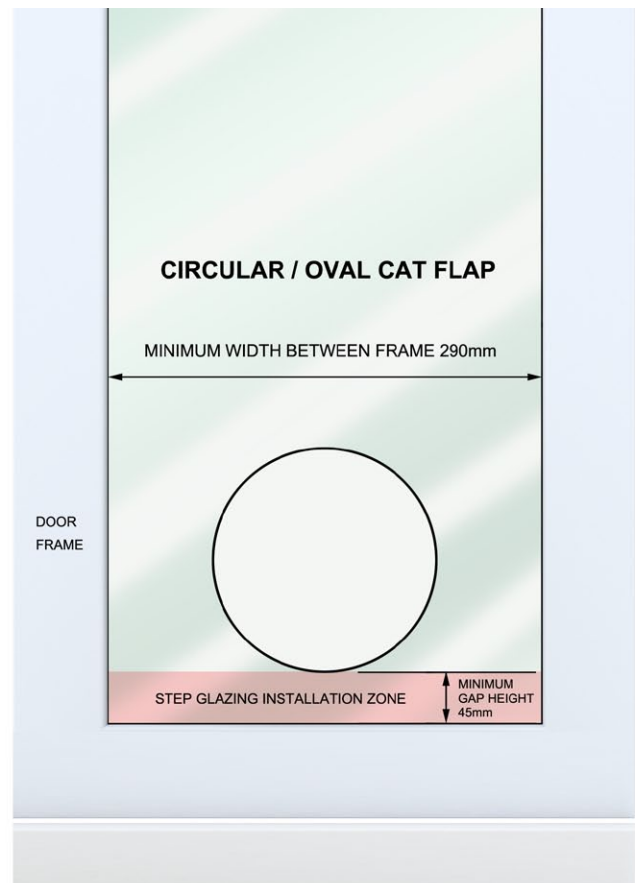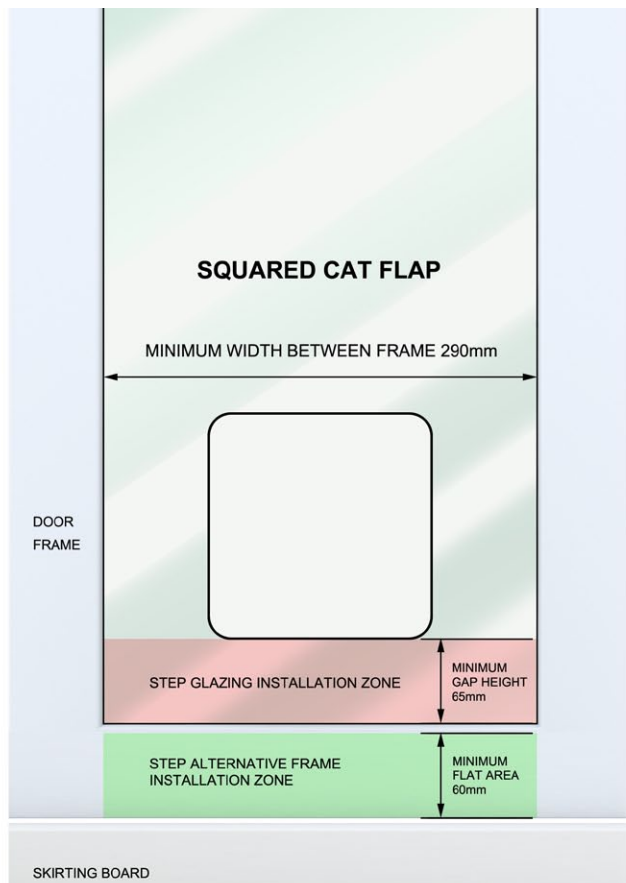

GLASS/UPVC INSTALLATION SUMMARY:

- Minimum 65mm **vertical** gap between the bottom of the pet flap and the window/door frame. (45mm for oval or circular pet flaps).
- Minimum 290mm **horizontal** space between the window or door frame.
- Completely clean and smooth glass/UPVC surface.
- Make sure the step does not interfere with any walls, etc when the door is opened.

FRAME INSTALLATION SUMMARY:

- Minimum 60mm **vertical** flat clean mounting surface.
- Minimum 290mm **horizontal** flat clean mounting surface.

SAFETY NOTICE:

- Make sure the step won't be a trip hazard.
- Make sure the step doesn't restrict access.